

## **Command list for the SS8RC / SS16RC and the SM8RC / SM16RC.**

Remote control is done via RS232 8N1 2400 baud. All commands are capitol letters or numbers. All commands MUST be followed by a CR character.

### **SM8RC- microphone mixer/switcher. 2 Cascade able units up to 16 channels.**

“MIx” Where x is the microphone you want on.

“MOx” Where x is the microphone you want off.

“MN” Turn all microphones off.

“MA” Turn all microphones on.

String formats:

“MI1,5,B” is a valid format. Turns on microphones 1,5 and 11.

“MO2,3,E” is a valid format.

SM8 Microphones 1-8 are addressed with ASCII 1,2,3,4,5,6,7,8.

SM8 Microphones 9-16 are addressed with ASCII 9,0,B,C,D,E,F,G. For example, to punch up microphone 14, you would send “MIG”

### **SS8RC- Speaker switcher/driver. 2 Cascade able units up to 16 speakers.**

“TBx” Where x is the speaker you want on.

“TBN” Turn off all speakers

“TBA” Turn on all speakers

String format:

“TB1,5,G” is a valid format. Punches up speakers 1,5 and 16.

SS8 Speakers 1-8 are addressed with ASCII 1,2,3,4,5,6,7,8.

SS8 Speakers 9-16 are addressed with ASCII 9,0,B,C,D,E,F,G. For example, to punch up speaker 15, you would send “TBF”

