


CAT5-BB Instructions

The CAT5-BB is an in-line break out board for tapping power and or data signals off of a CAT5 cable run.

Connections

Connect CAT5 cable(s) at either or both input/output jacks. Note pin 1 orientations on both RJ45 jacks for CAT5 crossover considerations. All pins on the RJ45s are 1-1...8-8. Each numbered terminal block identifies which pin of the RJ45 is tapped (broke out).

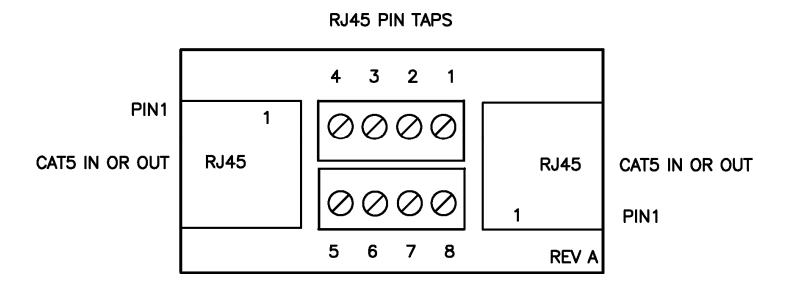

Warranty

All ETS products carry a one year parts and labor warranty. This warranty does not cover damages as a result of misuse, improper handling of the unit or exposure to extreme temperatures or moisture. At its discretion, ETS reserves the right to repair or replace this unit under the conditions of the warranty. If you experience problems with your equipment call ETS at: 505-888-3923 to obtain a return authorization number. Equipment requiring repair beyond the warranty period or units that have been damaged or are not covered under the warranty can be repaired by ETS for a minimal cost under most conditions.

Made in the USA